

F-SERIES PICKUP BOX FLOOR SERVICE KIT INSTRUCTIONS

KIT		
Part Number	Description	Quantity
FL34-9511215-BB	Pan Assembly Rear Floor - 5.5' Box	1
SKFL34-9511215-AA	Instruction Sheet	1
NOT INCLUDED IN KIT (PROCURE LOCALLY)		
Part Number	Description	Quantity
W707638-S900C	Blind Rivet	17
W702512-S900C	Blind Rivet	28
W708777-S900C	Blind Rivet	14
W702554-S900C	Blind Rivet	8
Motorcraft TA-1, 3M 8115 or Fusor 108B	Metal Panel Bonding Adhesive	1

KIT		
Part Number	Description	Quantity
FL34-9611215-BB	Pan Assembly Rear Floor - 6.5' Box	1
SKFL34-9511215-AA	Instruction Sheet	1
NOT INCLUDED IN KIT (PROCURE LOCALLY)		
Part Number	Description	Quantity
W707638-S900C	Blind Rivet	17
W702512-S900C	Blind Rivet	32
W708777-S900C	Blind Rivet	14
W702554-S900C	Blind Rivet	8
Motorcraft TA-1, 3M 8115 or Fusor 108B	Metal Panel Bonding Adhesive	1

KIT		
Part Number	Description	Quantity
FL34-9811215-BB	Pan Assembly Rear Floor - 8.0' Box	1
SKFL34-9511215-AA	Instruction Sheet	1
NOT INCLUDED IN KIT (PROCURE LOCALLY)		
Part Number	Description	Quantity
W707638-S900C	Blind Rivet	17
W702512-S900C	Blind Rivet	36
W708777-S900C	Blind Rivet	14
W702554-S900C	Blind Rivet	8
Motorcraft TA-1, 3M 8115 or Fusor 108B	Metal Panel Bonding Adhesive	1

SKFL34-9511215-AA

SHEET 1 OF 3



SERVICE GUIDELINES:


- Aluminum repairs should be performed in an area protected from steel working areas, and tools used in aluminum repair should be quarantined from steel repair tools.
- Replacement Self-Piercing Rivets (SPRs) are the preferred replacement during repair for original SPR locations, where feasible. Blind rivets are the next preferred replacement for original SPRs. In some cases, solid rivets may also be used as a replacement for SPRs. The figures will explicitly call out which rivets are possible.
- Replacement SPRs are to be installed adjacent to original SPR location.

NOTE: Do not install replacement SPR in original SPR hole.

- Blind rivets may be installed in original SPR holes, after they are reamed out to 6.5mm. Be sure to grind all surfaces of the flange smooth prior to blind rivet installation in original SPR locations.
- Flow Drill Screws (FDS) are to be replaced by blind rivets only. The original location of the FDS is used, but reamed out to 6.5mm.
- Rivets may be removed by drilling, grinding, or SPR gun set up as a rivet removal tool.
- Using heat (not exceeding 425 °F) to loosen a rivet bonded panel should only be done when all panels in the joint will be replaced or separated and new adhesive applied.
- Flange preparation for adhesive is to grind to clean metal with 80-120 grit, clean, and then apply the adhesive, spreading it out with an acid brush, covering any exposed aluminum.
- Clecos are an excellent way to hold the panels into position when fitting and drilling rivet holes.

JOINT REPLACEMENT LOCATIONS:

- Replace screws (seventeen (17) total) on front of pickup box with blind rivets (W707638-S900C) represented by 3.0mm black dots. (Refer to Figure 1).

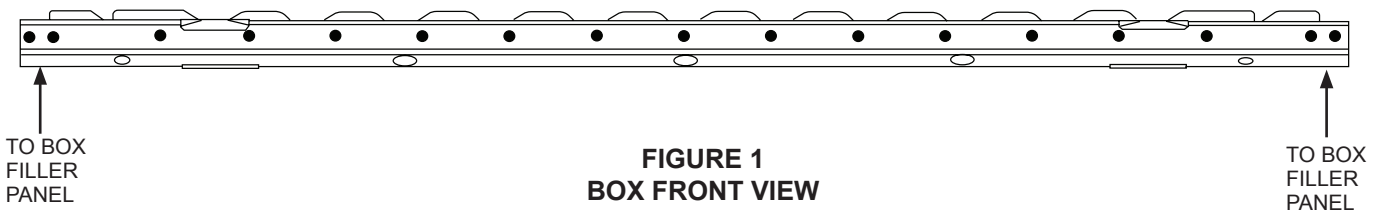

**FIGURE 1
BOX FRONT VIEW**



- Replace SPRs on sides of pickup box floor with blind rivet (W702512-S900C) black squares, according to quantity per side: 24 (5.5' box length), 28 (6.5' box length), 34 (8' box length). (Refer to Figure 2).



FIGURE 2

- Replace SPRs on rear sill (four (4) per side) (eight (8) total) with blind rivet (W708777-S900C), black triangles. (Refer to Figure 3).
- Replace SPRs on rear sill (four (4) per side) (eight (8) total) with blind rivet (W702554-S900C), black pentagon. (Refer to Figure 3).

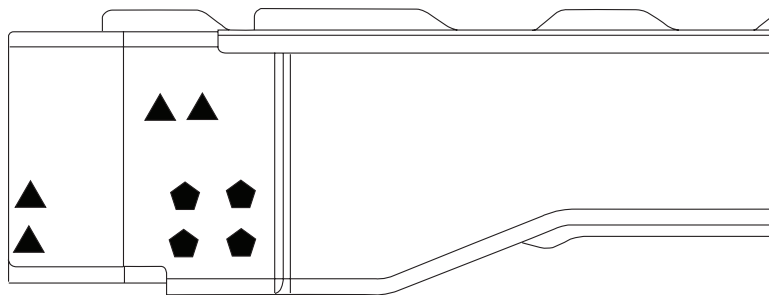


FIGURE 3
REAR SILL VIEWED FROM BEHIND VEHICLE

- Replace SPRs on rear sill (two (2) per side) (four (4) total) with blind rivet (W702512-S900C), black squares. (Refer to Figure 4).
- Replace SPRs on rear sill (three (3) per side) (six (6) total) with blind rivet (W708777-S900C), black triangles. (Refer to Figure 4).

NOTE: Drawing shows rear face of rear sill.

NOTE: The location of SPR and adhesive shown below are based on the original production drawings and should only be used as a guideline.

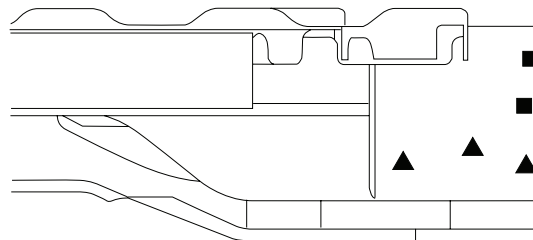


FIGURE 4
REAR SILL VIEWED FROM UNDERNEATH VEHICLE

SKFL34-9511215-AA

SHEET 3 OF 3



CPR © 2014 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10-14

F-SERIES PICKUP BOX FLOOR